

# USER MANUAL

EnnoShi is an innovative, charcoal-free smart hookah that redefines the traditional hookah experience. Designed for convenience and personalization, it offers a healthier alternative with no ash, mess, or hassle. Its easy 5-minute setup eliminates the inconvenience of preparation while delivering rich, authentic flavor and a premium experience. EnnoShi combines sophistication and ease, making every session seamless, clean, and enjoyable. Experience the future of hookah with EnnoShi.

## Inside the Box

- EnnoShi (1x Top Body: 1x Glass Bowl with Filter & GripPad)
- 1x Hose (with metal handle & end-connector)
- 5x Reusable Flavor (Molasses) Pods
- 1x Flavor Pod Tong
- 1X Flavor Pod Cleaning Brush
- 1x Flavor Mixing Spatula
- 1x Air Vent Cleaning Brush
- 1x Charging Adapter
- 10x Disposable Mouthpieces

## Specification


- Model: ES01
- Power: Maximum: 45W  
Minimum: 11W
- Input Voltage: 16.8V; 4A;
- Dimensions: 408.3 mm x 188.72 mm
- Weight: 3.3 kg
- Operating Time: Up to 5 hours
- Charging Time: 3 hours  
(DC charger included)
- Materials: Glass & Metal & Silicone

## Quick Setup


**1.** Fill the glass bowl with water up to the maximum marking. Place the filter tip at the bowl's mouth and fasten the top body securely.



**2.** Connect the hose by attaching the metal handle to the end connector. Insert the end connector into EnnoShi, ensuring it is airtight.

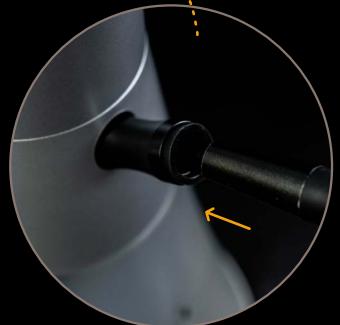

**3.** Fill the flavor pod with your preferred flavor molasses. Use the mixing spatula to spread it evenly, ensuring the center airhole is not blocked.

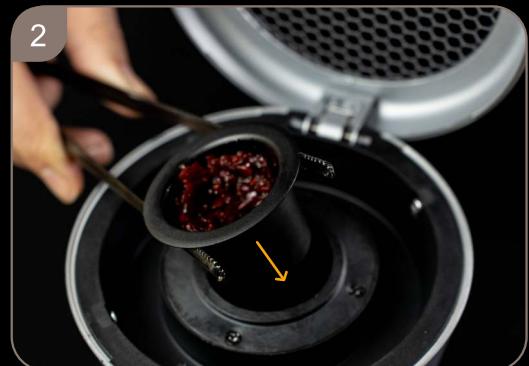

**4.** Press and hold the power button for 2 seconds to turn on EnnoShi. A red ring light will appear.



**5.** Adjust the heating level using the power button (First Level by Default):

- 1 LED: Lowest heating temperature
- 5 LEDs: Highest heating temperature

Short press the power button to increase the heating level. The interval between short presses should be at least **1 second**. At the highest level, it cycles back to the lowest with each press.



**6.** When the desired level is set, the red ring light will pulse. After about 5 minutes, EnnoShi will beep, and the red ring light will become solid, indicating it's ready for use.

**Note:** The amount of smoke produced during use may vary depending on the type and quality of the flavor used.



**7.** During the session, you can use the spatula to mix the flavor molasses, ensuring the center air gap remains unblocked.

## Anti-Touch Mode

- For your safety, the device is set to a Anti-Touch Mode by default. Please unlock it before first use.
- To deactivate the anti-touch mode, press and hold the button for 10 seconds.
- To reactivate the anti-touch mode, press and hold the button for 10 seconds while the device is unlocked.

## Sleeping Mode

- The device will automatically enter Sleeping Mode and power off after 60 minutes of inactivity. All indicator lights will turn off.

- **To Deactivate Sleeping Mode**

Under Sleeping Mode, press the power button 5 times quickly. The five red lights will light up and then turn off one by one (right to left). Once all lights turn off, the device will return to its original state.

- **To Reactivate Sleeping Mode**

Press the power button 5 times quickly. The red lights will turn off, then light up one by one (left to right). Once all lights are on, the device will restore to its original state.

**Note:** Sleeping Mode is enabled by default. If deactivated, the device will remain powered on and will not shut down automatically, even after long periods of inactivity.

## Cleaning Instructions:


**1.** Turn off EnnoShi by pressing and holding the power button for 3 seconds until the red ring light turns off.

**2.** Use the tong to remove the flavor pod. Allow the pod to cool to room temperature before disposing of the used flavor. Soak the pod in water, then clean it with the provided brush. Optionally, use an alcohol pad or swab to gently wipe the inside of the pod.



**3.** Detach the glass bowl and empty the water. You can clean it with liquid soap.

**4.** Use the air vent cleaning brush to clean the air vent beneath the pod.

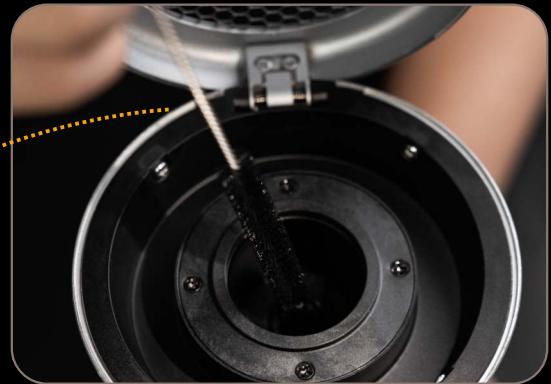

## Power & Battery

- **Power Indicator**

The white light indicates the battery level.

- A fully charged EnnoShi can run for up to 5 hours, depending on the heating level.

5 lights=>80% battery

4 lights=(80-60)% battery

3 lights=(60-40) % battery

2 lights=(40-20)% battery

1 light=< 20% battery

**Low Battery Reminder:** the buzzer alarms when the battery is as low as 5 minutes before power off.

## Charging Instructions:

1. Use the provided power adapter to charge your EnnoShi. A full charge takes approximately 3 hours.
2. Charging in Progress: When the power adapter is connected, the red light on the adapter will remain on, indicating that the device is charging.
3. Charging Complete: Once fully charged, the green light on the power adapter will illuminate.
4. When the device is charging while powered off, the indicator light on the device will gradually illuminate in white. Once fully charged, all lights will remain solid white.

## Precautions

**Avoid Contact with Hot Surfaces:** Do not touch the upper part of the device during or after operation as it becomes hot.

**Airflow Blockage:** Do not block the center airhole at the bottom of the pot when filling flavor.

**Proper Usage:** Avoid blowing and inhaling too rapidly.

**Stirring:** Remove the pot from the device when stirring the flavor.

**Handling the Pot:** Use the provided tong to remove the pot. Always remove the pot from the device after use and allow it to cool before handling it.

**Cleaning:** Do not use a hard cleaning brush to clean the pot.

**Keep Away from Heat Sources:** Keep the device away from heat or ignition sources, such as radiators or stoves, during use or charging. Avoid using it near flammable materials.

**Storage:** After use, store the device in a clean and dry place.

*For more information,  
SCAN below*



W: [www.ennoshi.com](http://www.ennoshi.com)  
E: [info@ennoshi.com](mailto:info@ennoshi.com)